



Visit [www.nobreach.com](http://www.nobreach.com) for more install help.

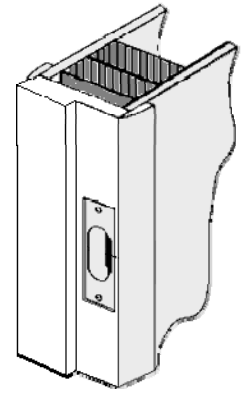

**Suggested tools needed**

Pencil & Measuring tool  
Chisel & Mallet



Cross tip screw driver (Phillips) or Power drill  
Saw (Hack saw, Miter saw, Hand saw, Sawzall)

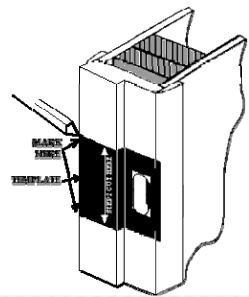

**STEP 1**

Remove old strikes plate and weather stripping around this area of the door frame. Align template supplied with product with existing strike latch and door edge. With a pencil trace outline of template onto door frame.


Using a saw cut doorstop (cleat) on lines previously marked. Remove this portion of the doorstop (cleat).

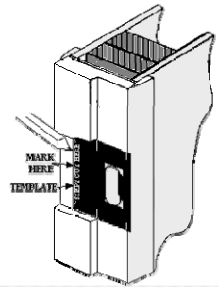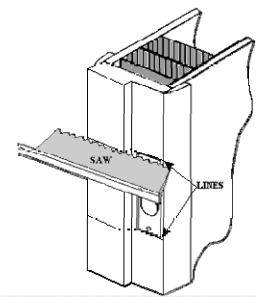

**STEP 2**

Cut template along the line marked "Step 2 Cut Here". Place template back on door frame, aligning the same as step 1. Mark edge closes to the outside of the door frame.



Chisel out area for new DSA plate to a depth of 3/32 inch or until plate is flush with door frame back to the incision.

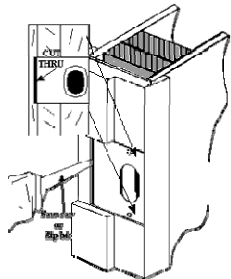

**STEP 3**

Using a Roto zip, or Sawzall, or Power drill, make an incision all the way through the door frame exposing studs behind door frame.


Using a mallet tap in the DSA plate to insure that it seats flush in its proper place; if not re-do step 2.

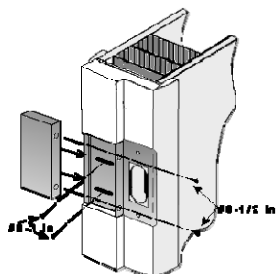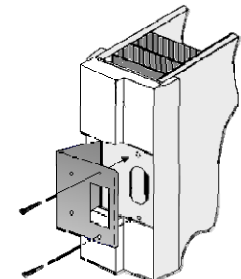


**STEP 4**

Install DSA plate, tapping with rubber mallet if necessary, anchor with two #8 x 3/4" screws provided. Connect the doorstop (cleat) to the front of the DSA plate with #8 x 2.5" screws provided. Side cover onto back plate & secure with #4 x 3/8" screws. Replace weather stripping.

For more help email us at [techhelp@nobreach.com](mailto:techhelp@nobreach.com)

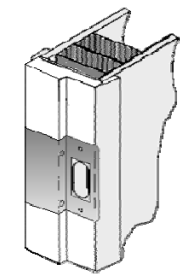


Visite [www.nobreach.com](http://www.nobreach.com) para obtener más ayuda de instalación

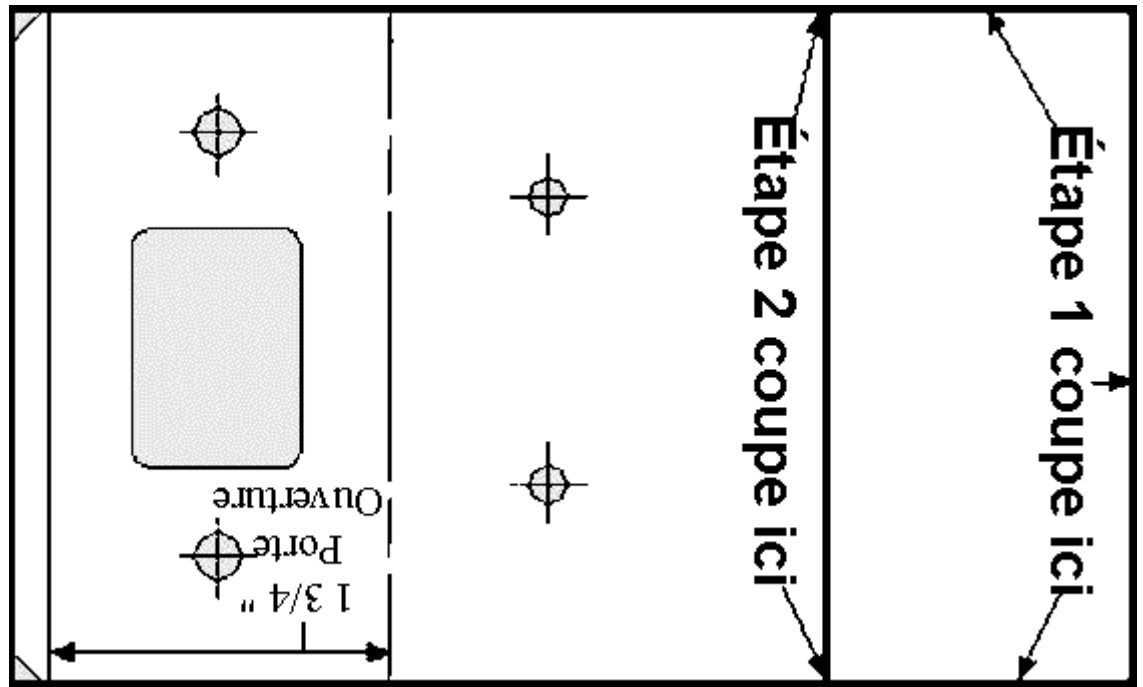

**Sugerido herramientas necesarias**



Herramienta lápiz y medición  
Cinzel y Mallet

Cruzar destornillador de punta (Phillips) o taladradora  
Vio (Sierra de Hack, Sierra de inglete, serrucho, Sawzall)

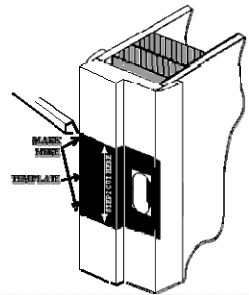


**PASO 1**

Desmonte antiguo placa de huelgas y limpieza de tiempo alrededor de esta área del marco de la puerta. Alinear la plantilla suministrada con el producto con borde de cerradura y puerta de huelga existente. Con un contorno de traza de lápiz de plantilla en el marco de la puerta. Usando una Sierra de cortar vendiéramos (clara) en las líneas marcadas anteriormente. Eliminar esta parte de la vendiéramos (clara).

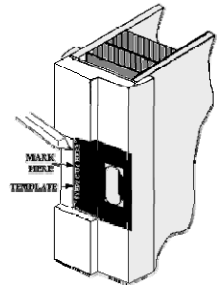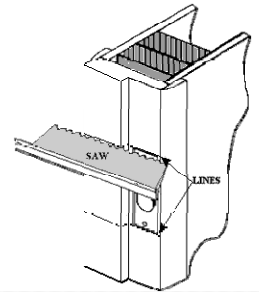



**PASO 2**

Cortar la plantilla a lo largo de la línea marcada "Paso 2 cortar aquí". Coloque la plantilla de nuevo en el marco de la puerta, alinear el mismo que el paso 1. Borde de marca se cierra al exterior del marco de la puerta. Cinzel área nueva de DSA de Plate, a una profundidad de 3/32 de pulgada o hasta que la placa quede nivelada con el marco de la puerta a la incisión.

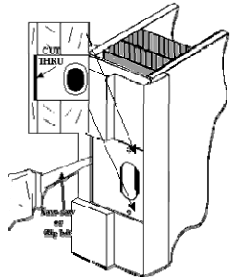


**PASO 3**

Use una taladradora o Sawzall o zip Roto, para hacer una incisión a través del marco de la puerta exponer clavos detrás de marco de puerta. Con una llave de paso del mazo en la DSA placa para asegurar que asientos para vaciar en el lugar adecuado; Si no es rehacer el paso 2.

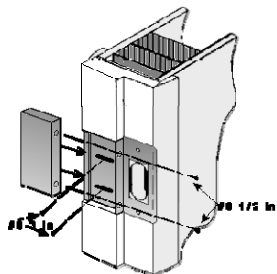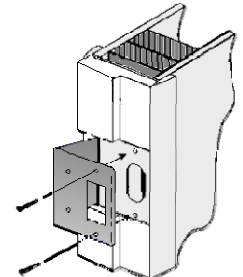

**PASO 4**

Instale la placa DSA, golpeando con maza de goma, si fuera necesario, anclaje con dos # 8 x 3/4 "tornillos instalarán. Conectar el vendiéramos (clara) al frente de la placa DSA con # 8 x 2,5 "tornillos suministrados. Cubierta en la lámina posterior del lado & secure con # 4 x 3/8 "tornillos. Reemplazar la limpieza de tiempo.

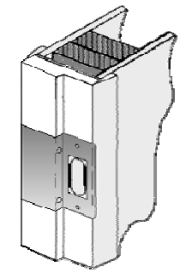

Para obtener más ayuda escríbanos a [techhelp@nobreach.com](mailto:techhelp@nobreach.com)